





How to use AMCAP to test and change parameters for USB cameras

1. The windows based AMCAP software can be downloaded from Spinel site:
<https://www.spinelectronics.com/pdf/AMCapFullSetup.exe>
2. After you connect USB camera to the computer, select the USB camera device from AMCAP as the picture shown below:

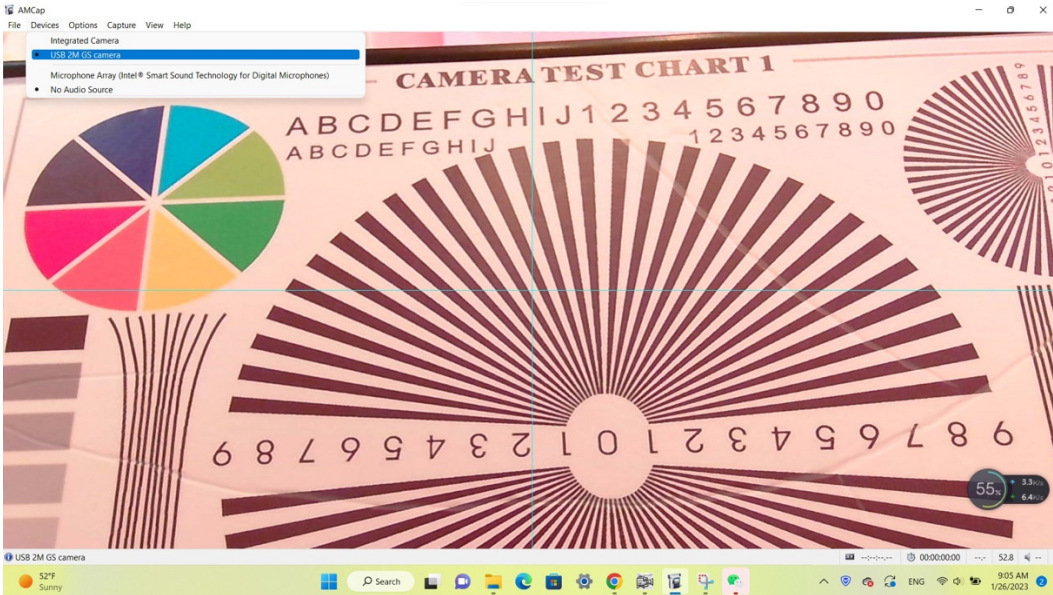

3. Go to "options"->"Video Device"->"Properties", where you can change the parameters that are adjustable as following:

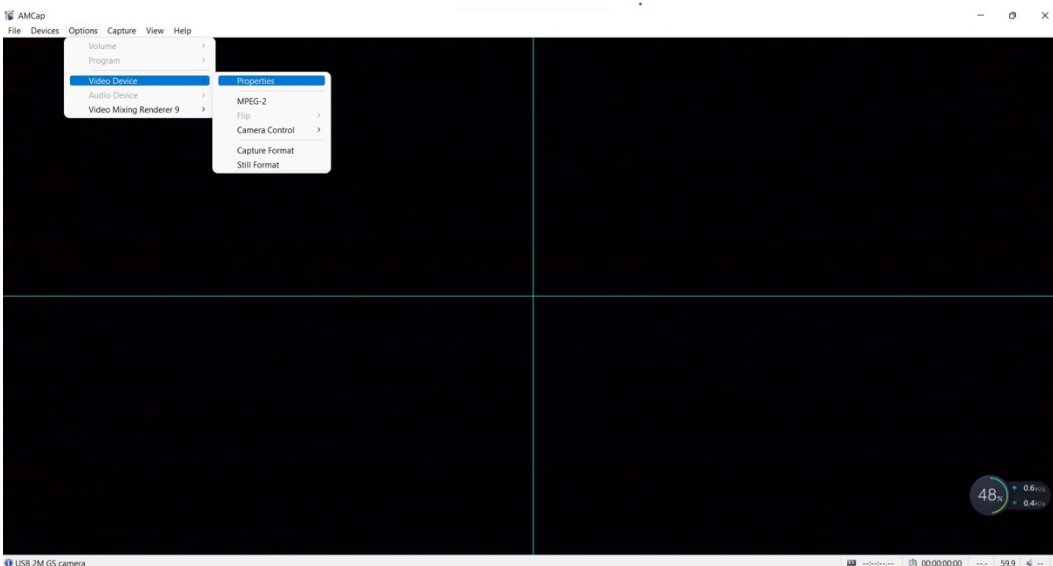

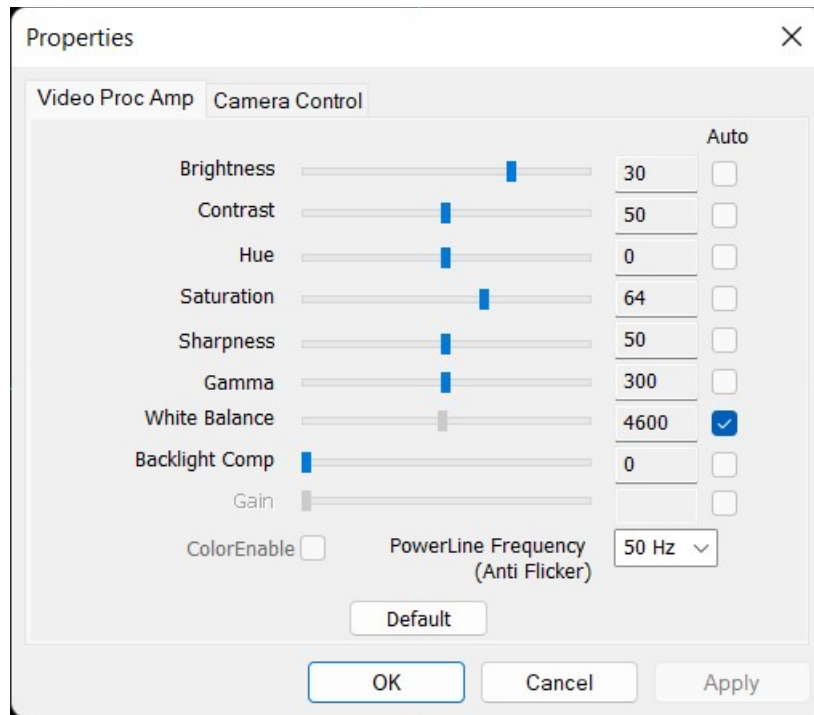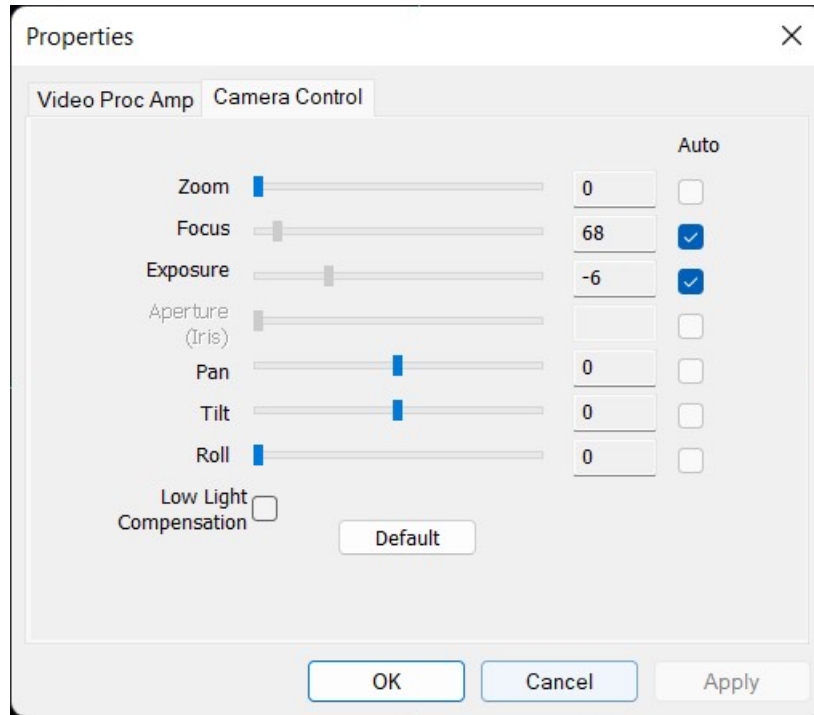

Once you select the new value you would like to change to, please make sure click on "Apply" and "OK" to make the new value valid.